


Monitor MX10

- MEASUREMENT OF PARAMETERS
- NO SIM CARD NEEDED
- RANGE WITH EXTERNAL ANTENNA UP TO 30 KM
- LED LIGHT Bright Light
- RF TECHNOLOGY WIRELESS CONNECTION WITH GATEWAY


### 1. Standard installation

Fence system divided into zones. When the voltage drops on a particular Monitor, you can easily identify the zone and locate the problem.

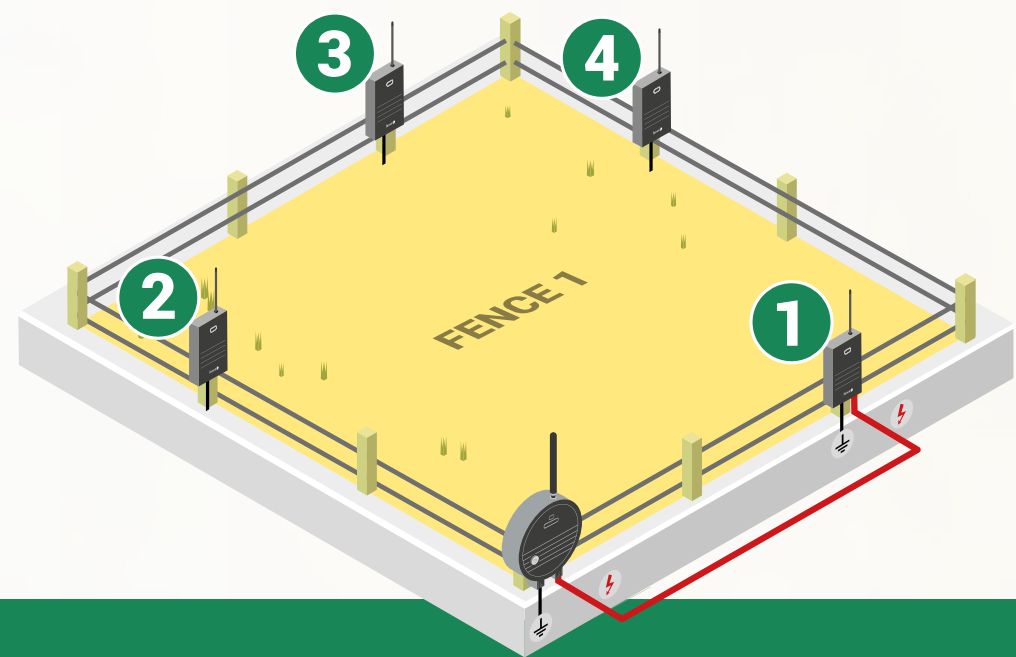


### 2. Installation at the entrance to the fence system

Installation for easy identification of the fence system with a non-functional fence.

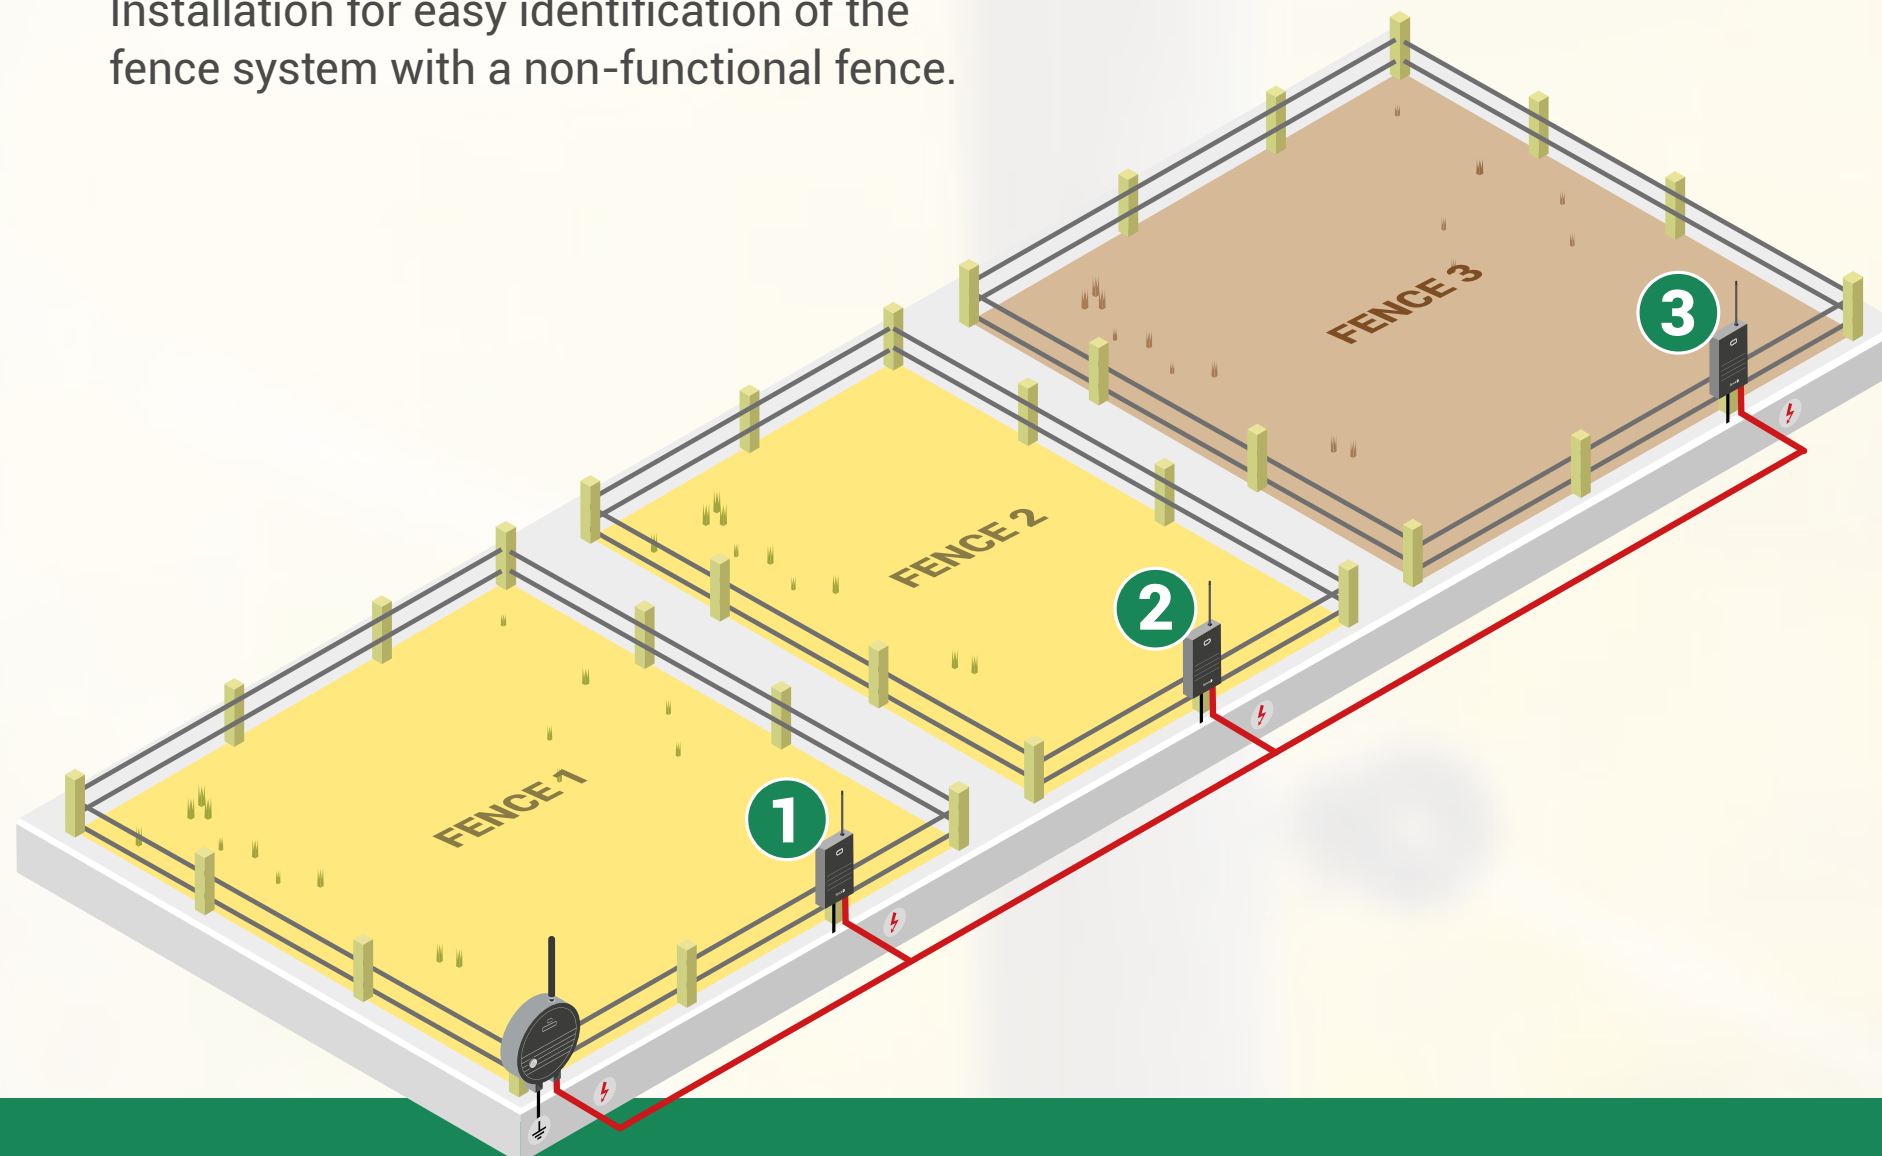

### 3. Installation at the entrance to the fence system and problem areas

Installation for easy identification of the fence with a non-functional fence. Or places where problems may occur more often, e.g. near the forest, near water, in places with denser vegetation.

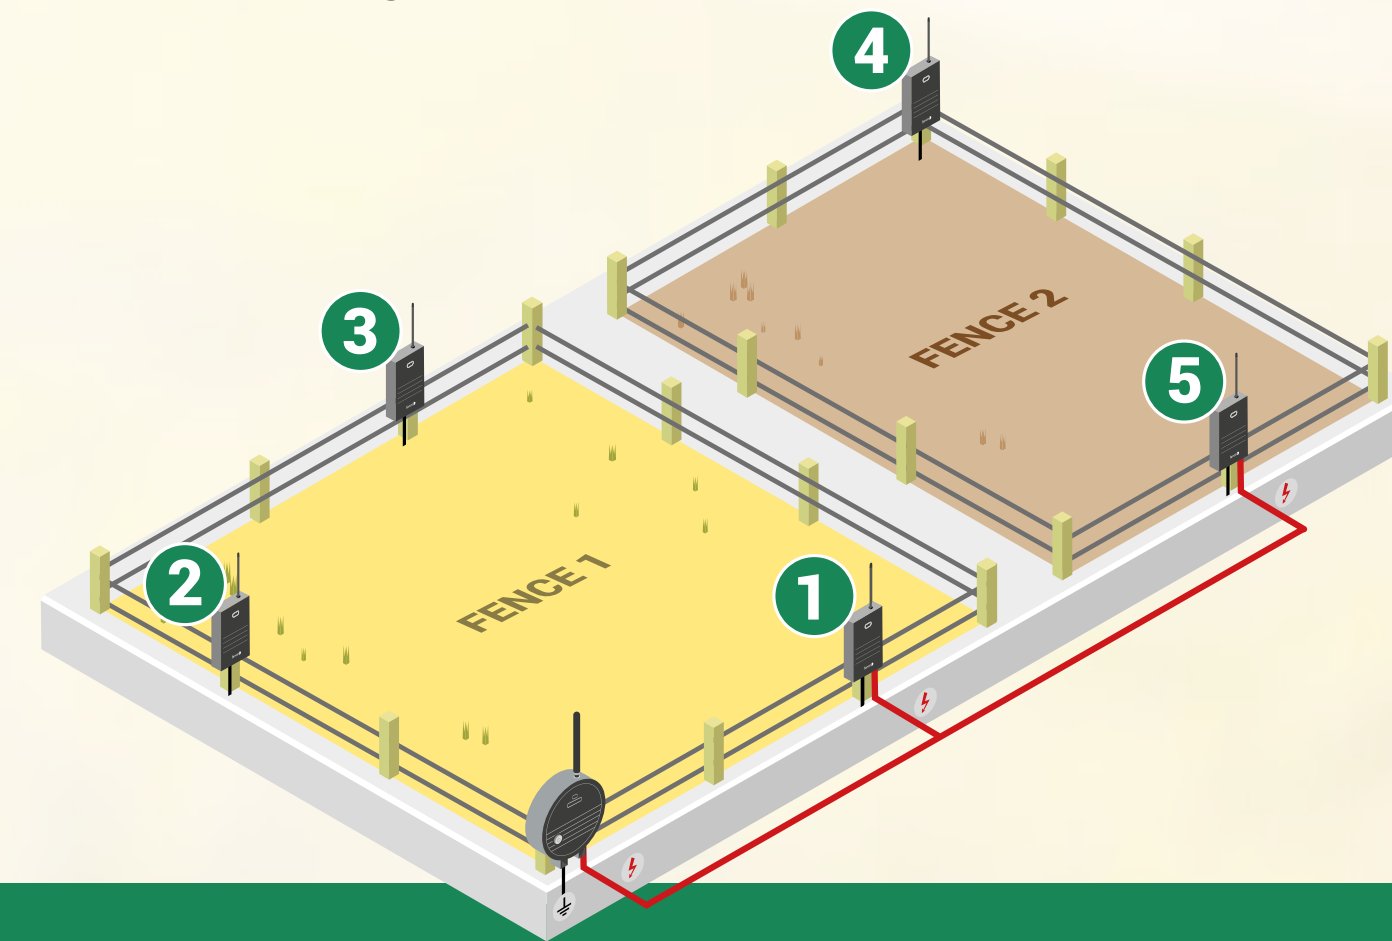

## TIP

Place the Monitor where voltage monitoring is required (entrance to the fence system) or where frequent problems can be expected, e.g. with vegetation, by the forest, by the water.